



Pond Skim 2000–3000

User manual

EN



1 Ring

2 Filter basket

3 Foam sponge

4 Float

5 Pump

6 Pump housing

Pond skimmer, keeps your pond surface clean and free from dirt. The Pond Skimmer floats in the pond and sucks dirt such as leaves, dust and algae from the water surface.



Installation

Place the Pond Skim in the pond, allowing it to float on the surface of the water, and plug the power cable into a socket-outlet. The Pond Skim will move around over the water surface. It can be held in a fixed position by weighting the power cable. The Pond Skim vacuums up water from the surface, capturing coarse debris on the filter basket and fine dirt in the foam sponge.

The filter basket and foam sponge can be dismantled easily for cleaning.

[View parts »](#)

Maintenance

Check and clean the filter basket daily. Clean the foam sponge weekly by rinsing it with clean tap water. The cleaning interval depends in part on the amount of dirt in the pond. Replace the foam sponge annually. A replacement kit is available from your dealer. Remove the Pond Skim from the pond in the fall before the start of freezing weather to prevent frost damage.

[View parts »](#)

Technical data:

	Pond Skim 2000	Pond Skim 3000
Voltage:	220-240 V/50 Hz	220-240 V/50 Hz
Power:	25 Watt	45 Watt
Capacity:	2.000 l/h	3.000 l/h
Max. Pond surface:	25 m ²	40 m ²
Cable length:	10 m	10 m

Safety & Warranty

[View the Safety & Warranty »](#)