



Pond Vac

User manual

EN

Function

Compact, Lightweight Pond Cleaner

A clean pond is vital for maintaining pond health. Use the SuperFish Pond Vac each week to perform necessary water changes while vacuuming dirt from the pond's bottom and walls.

Usage


- Connect the three parts of the metal wand (a) by inserting them into one another and tighten the orange plastic couplings (b) firmly.
- Attach the handle (c) to the end of the wand and also securely tighten the handle with the coupling.
- Insert the wand into the orange coupling (d) on the Pond Vac and tighten it well.
- Attach the supplied flexible hose (f) to the transparent outlet (e) of the Pond Vac.
- Use the supplied clips (g) to secure the flexible hose (f) along the wand.
- Select one of the three suction nozzles (h) and fasten it to the head of the Pond Vac, then turn it into the locking position.
- Plug the Pond Vac into a power socket.

 Ensure that a drip loop is formed to prevent water from entering the socket

- Slowly and carefully move the Pond Vac over the pond's bottom and sides.
- Remove all loose debris in this manner.

 Never operate the Pond Vac dry for more than one minute.

- Operating the device without water can harm the pump and rotor.
- Damage caused by dry running is not covered under the warranty.

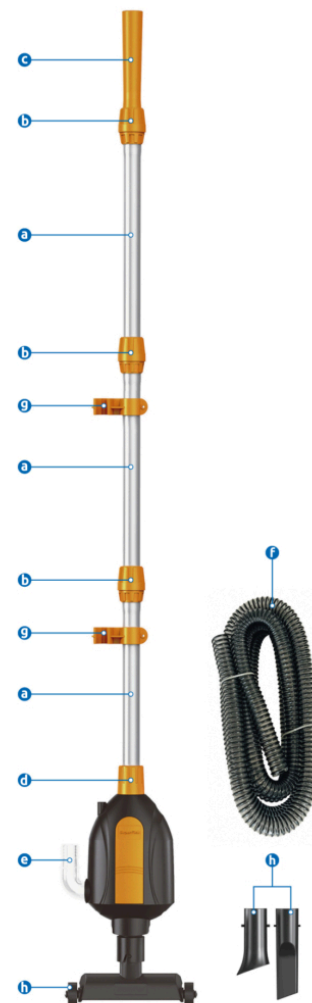

User Tips

- Weekly water replacement of 5 to 10% of your pond's volume is recommended. Since vacuuming the pond pumps water out, regular use of the Pond Vac is suggested, preferably during weekly water changes.
- The water you vacuum can be used to water your garden plants because pond debris contains natural fertilizer.
- Regular pond cleaning prevents dirt from accumulating into thick layers that are hard to remove.
- A clean pond ensures a healthy pond.

Maintenance



NOTICE! The Pond Vac must be cleaned regularly for trouble-free operation. Faults due to a dirty motor caused by improper or lack of maintenance are not covered by the warranty.



ALWAYS disconnect the mains plug before carrying out maintenance!

- Clean the housing, wand and nozzles, regularly with a damp cloth (preferably after each use).
- For stubborn dirt, use a soft cloth moistened with warm soapy water (max. 40°C). NEVER use solvents (benzene, alcohol, ammonia, etc.), these can damage the plastic parts.
- Rinse the flexible hose in clean water.

Power	Pump capacity	Wand length	Hose length / diameter	Cable length
80 watt	4,000 l/h	1.8 m	5 m / Ø 32 mm	10 m

Safety & Warranty

[View the Safety & Warranty »](#)