




Smart-Air 1 and 2

User manual

EN

Installation

- 1 The Smart-Air is easy to install on the side of your aquarium with the integrated suction cup.
- 2 Always position the air pump above the water level otherwise the pump can fill up with water as a result of the siphoning effect. No warranties for damages caused by the air pump getting wet or water fill inside the air pump!
- 3 Alternative you may use a non-return valve, then the air pump may be positioned underneath the water level.

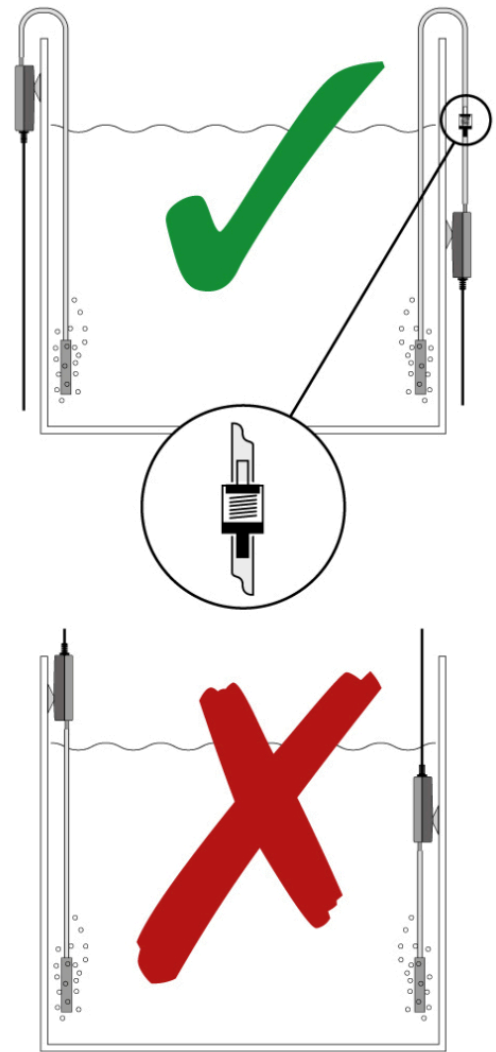

Maintenance

- 1 The lifespan of the Smart-Air is about one year, depending on the wear of the membrane.
- 2 Diaphragm wear is normal and is not covered by warranty. Due to the design the membrane cannot be replaced.
- 3 Replace air tube and air stones yearly. Old and cracked ones will reduce performance and durability of the air pump.

Technical specifications

Model	Air-flow	Pressure	Power
Smart-Air 1	320 ml/min	< 11 KPa	1 W
Smart-Air 2	320 ml/min x2	< 11 KPa	1.8 W

Safety & Warranty

[View the Safety & Warranty »](#)