
BlueMarine®

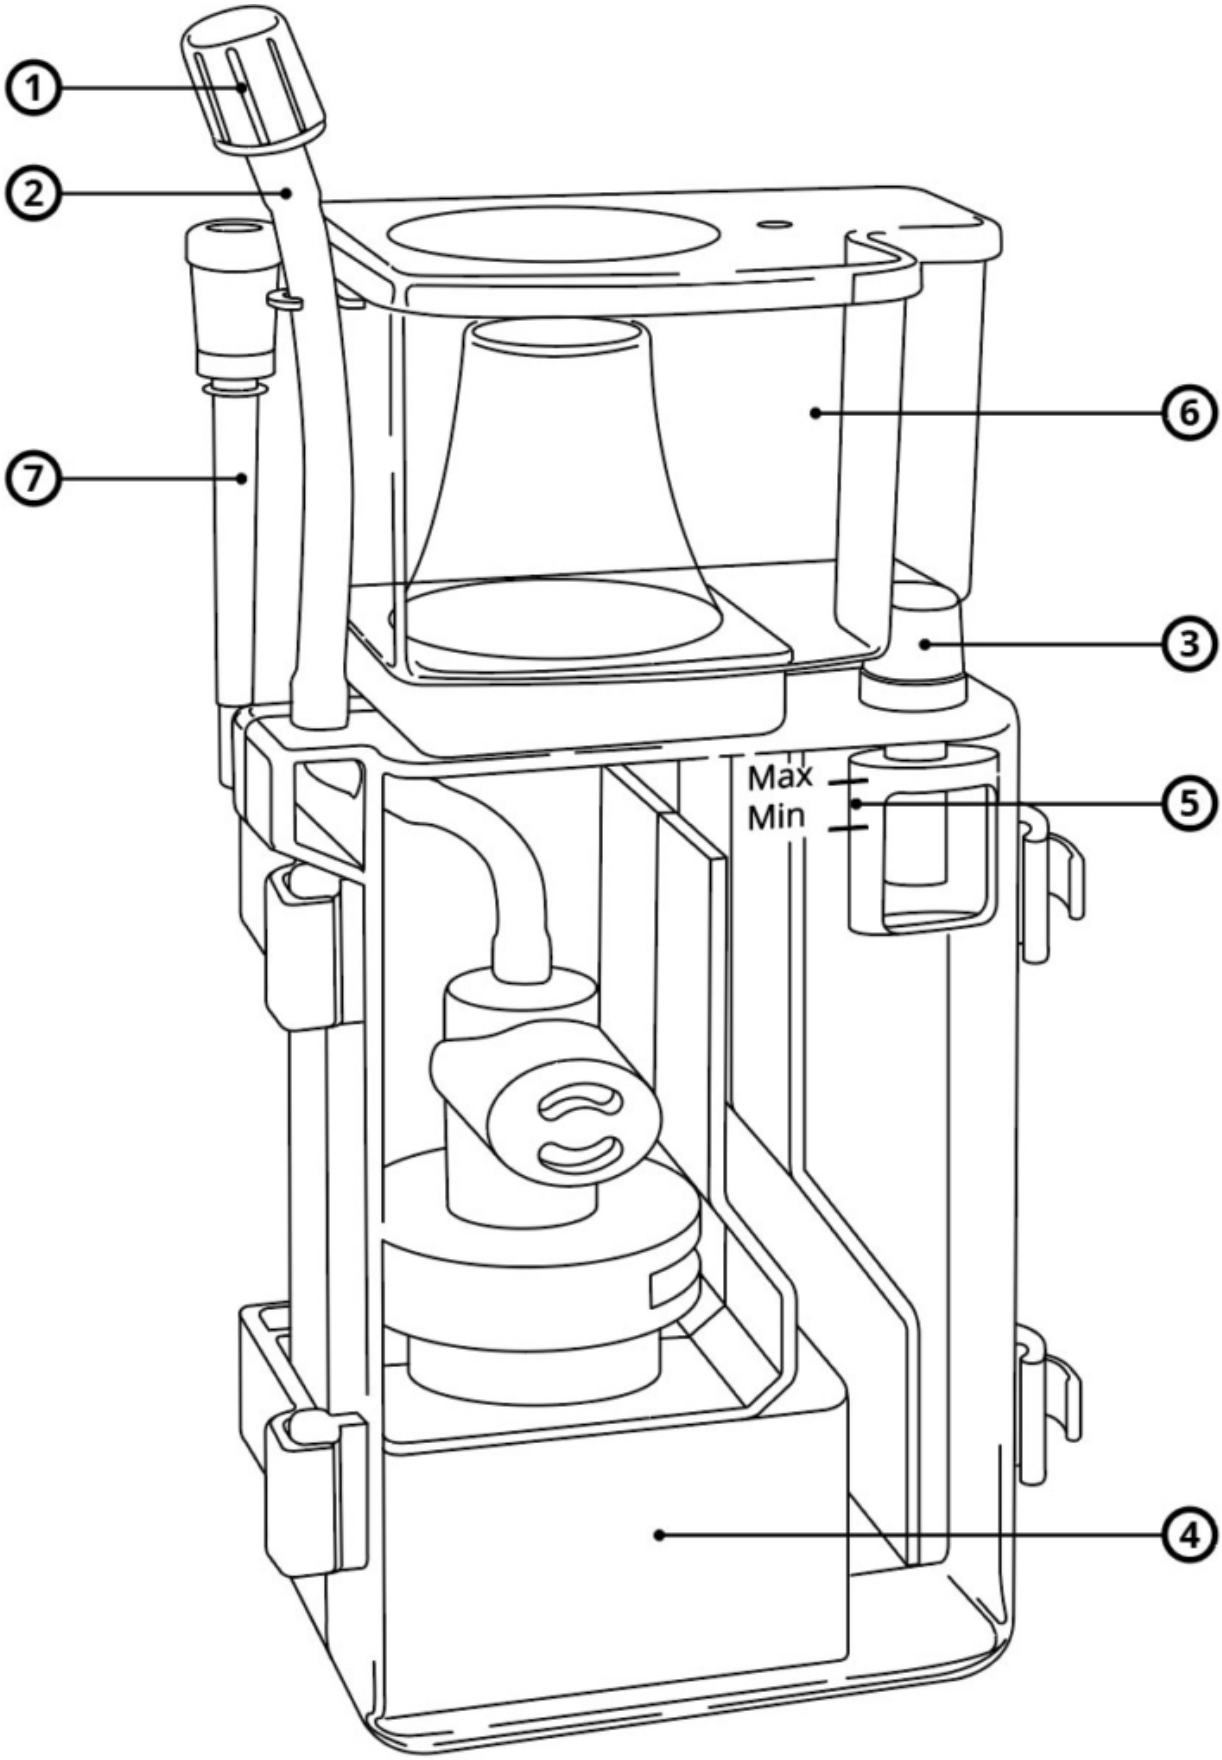

Internal Skimmer 120

User manual

EN



1
2
6
7
3
Max
Min
5
4

Parts

1. Air Flow adjusting valve
2. Air tube
3. Water Flow adjusting valve
4. Water pump
5. Min. Max. waterlevel indicator


6. Collection cup
7. Water flow adjusting tool
8. Holding brackets
9. Adjustable Hang-on bracket
10. Mounting screw

1. Air Flow adjusting valve
2. Water flow adjusting tool
3. Water Flow adjusting valve
4. Aquarium glass

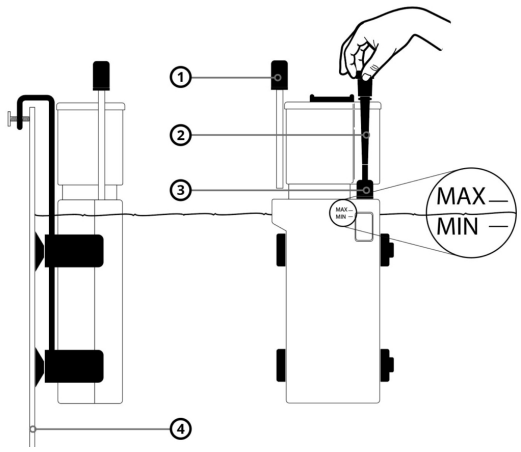

Installation

1. Make sure that the holding brackets (8) holding the front and rear cover are securly tightened
2. Make sure that the Hang-on bracket (9) is properly installed.
3. Make sure that the Air tubing (2) is properly connected to the pump
4. Place the skimmer in the tank using the Adjustable Hang-on bracket (9)make sure that the waterlevel is higher than the minimum waterlevel
5. First turn the Water Flow adjusting valve (3) to maximum using the Water flow adjusting tool (7)
6. Connect the power
7. Turn down the water level adjusting valve (3) the bubbles will move to the bottom of the collection cup (6)

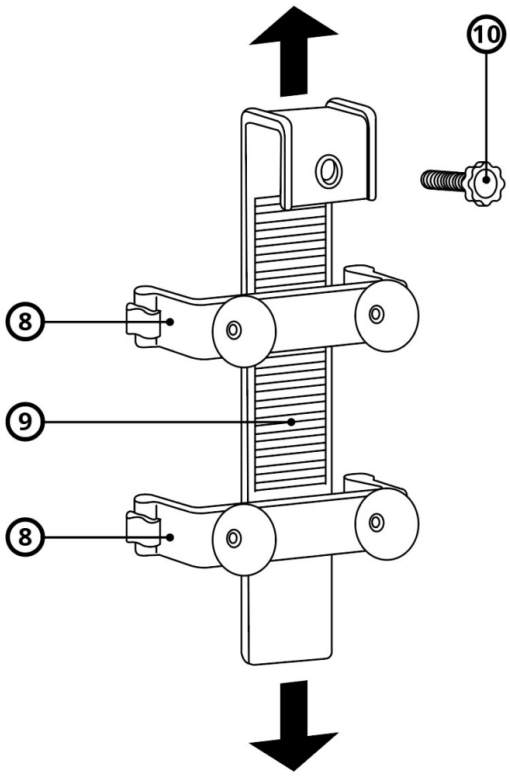

8. Adjust the air intake by the Air Flow adjusting valve (1) Down (clockwise) Up (counterclockwise)
9. Adjust the air intake by the Air Flow adjusting valve (1) Down (clockwise) Up (counterclockwise)

Overview »

Maintenance

- Clean the skimmer at least once every 2 weeks.
- Replacing the filter sponge every 2 months is recomended

Overview »

Safety & Warranty

View the Safety & Warranty »