
BlueMarine®

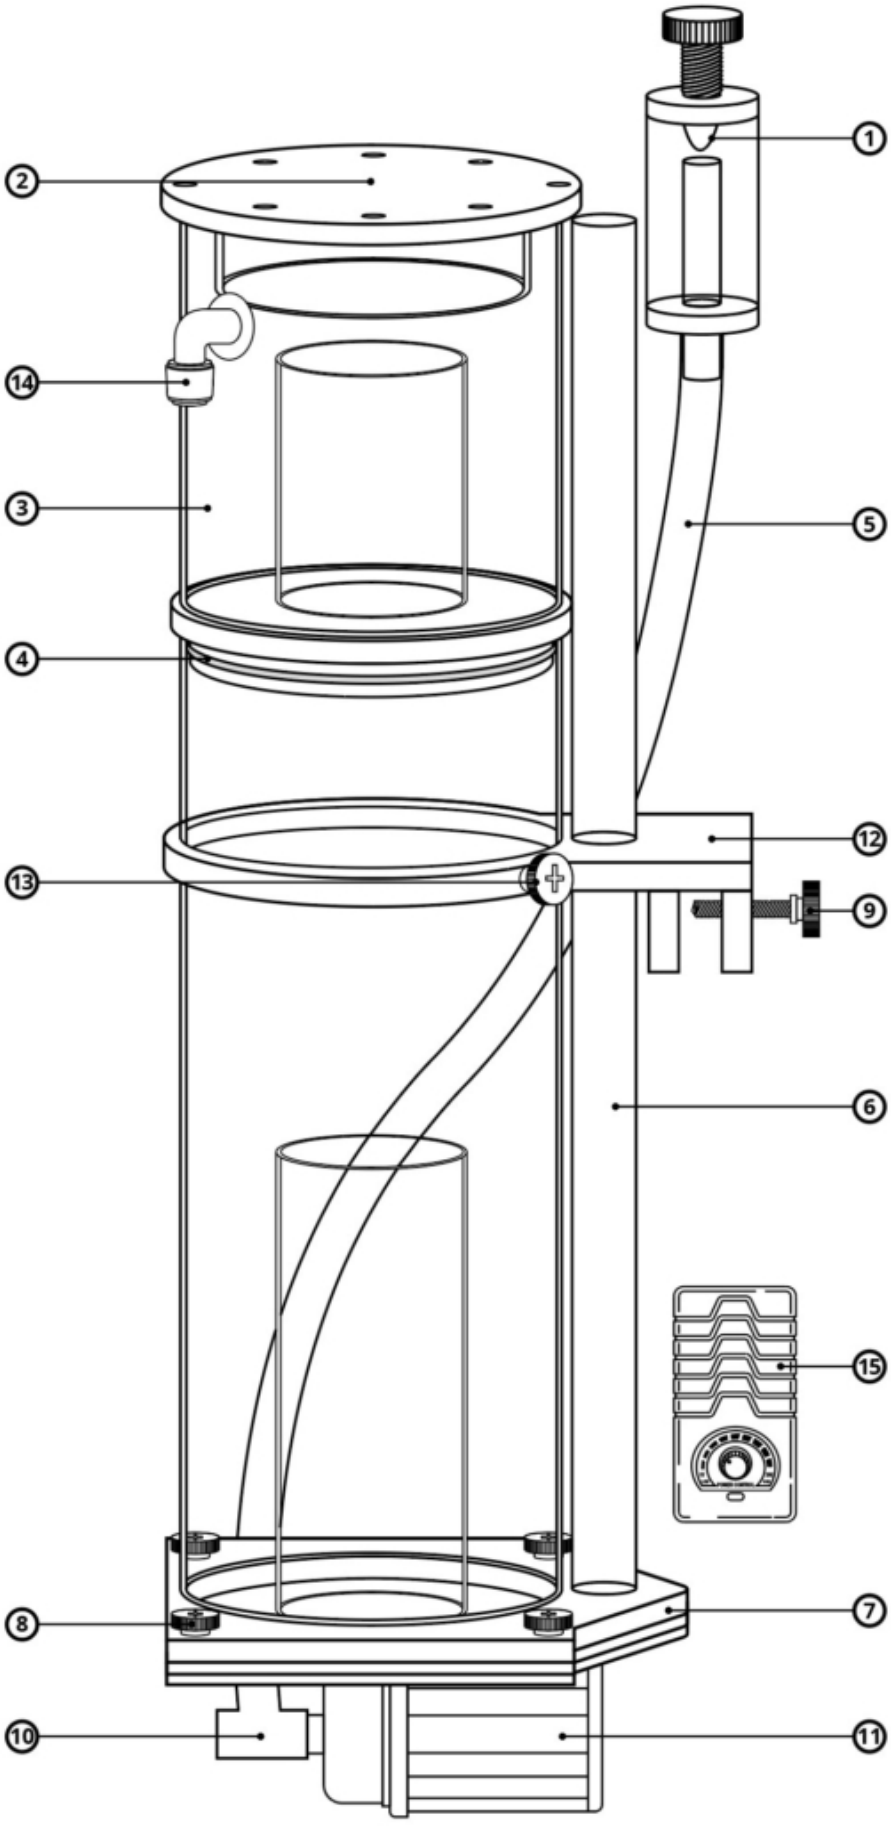

Internal Skimmer 200

User manual

EN


1
2
14
3
5
4
12
13
9
6
15
8
7
10
11

Parts

1. Air Flow adjusting valve
2. Collection cup lid
3. Collection cup
4. Seal
5. Air hose
6. Water level adjusting knob
7. Bottom plate


8. Nylon botom plate screws 4x
9. Mounting screw
10. Air venturi
11. Pump
12. Holding bracket
13. Holding bracket mounting screw
14. Waste valve
15. Controller

Installation

1. Connect the air venturi (10) to the Air Flow adjusting valve (1) by using the supplied air hose (5).
2. Now connect the skimmer ballast to the power outlet.
3. Adjust the pump power by using the controller (16) and adjust the water level with the adjusting knob (6).
4. Be careful using the skimmer just after you have filled your tank with freshly mixed salt as this can cause extreme foaming and overflow.
5. The controller has to be in a dry place, the controller is not water proof (damage due to water damage is no warranty!)

Operation

Change the running speed of the pump, to adjust the flow by turning the knob (a) to the right or left.

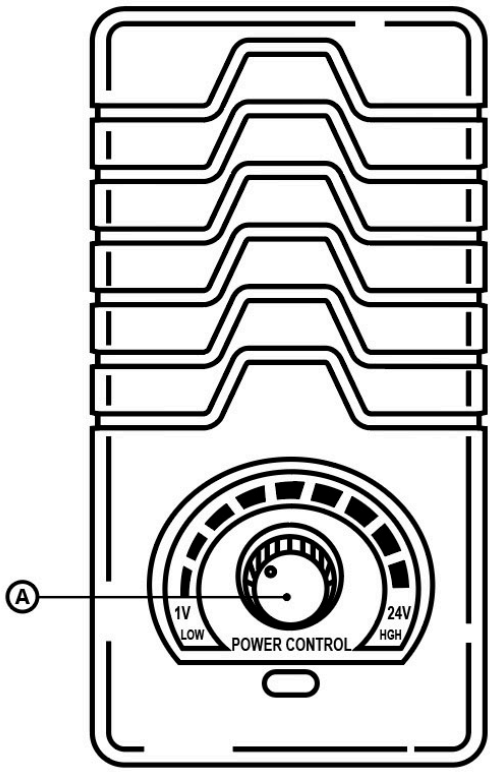

Overview »

Maintenance

1. To operate efficiently, the Blue Marine skimmer must be 24 hours a day in use
2. Check daily if your skimmer is functioning properly and produces the desired foam
3. Check daily if the collection cup is full and clean it completely when needed.
4. Check and clean pump regularly to ensure it does not become clogged, dirty pumps may break down, not maintained pumps are not covered by warranty.
5. For easy maintenance you can connect the waste hose with valve (15) to the collection cup for external collection into a bucket.

Overview »

Safety & Warranty

View the Safety & Warranty »