
BlueMarine®

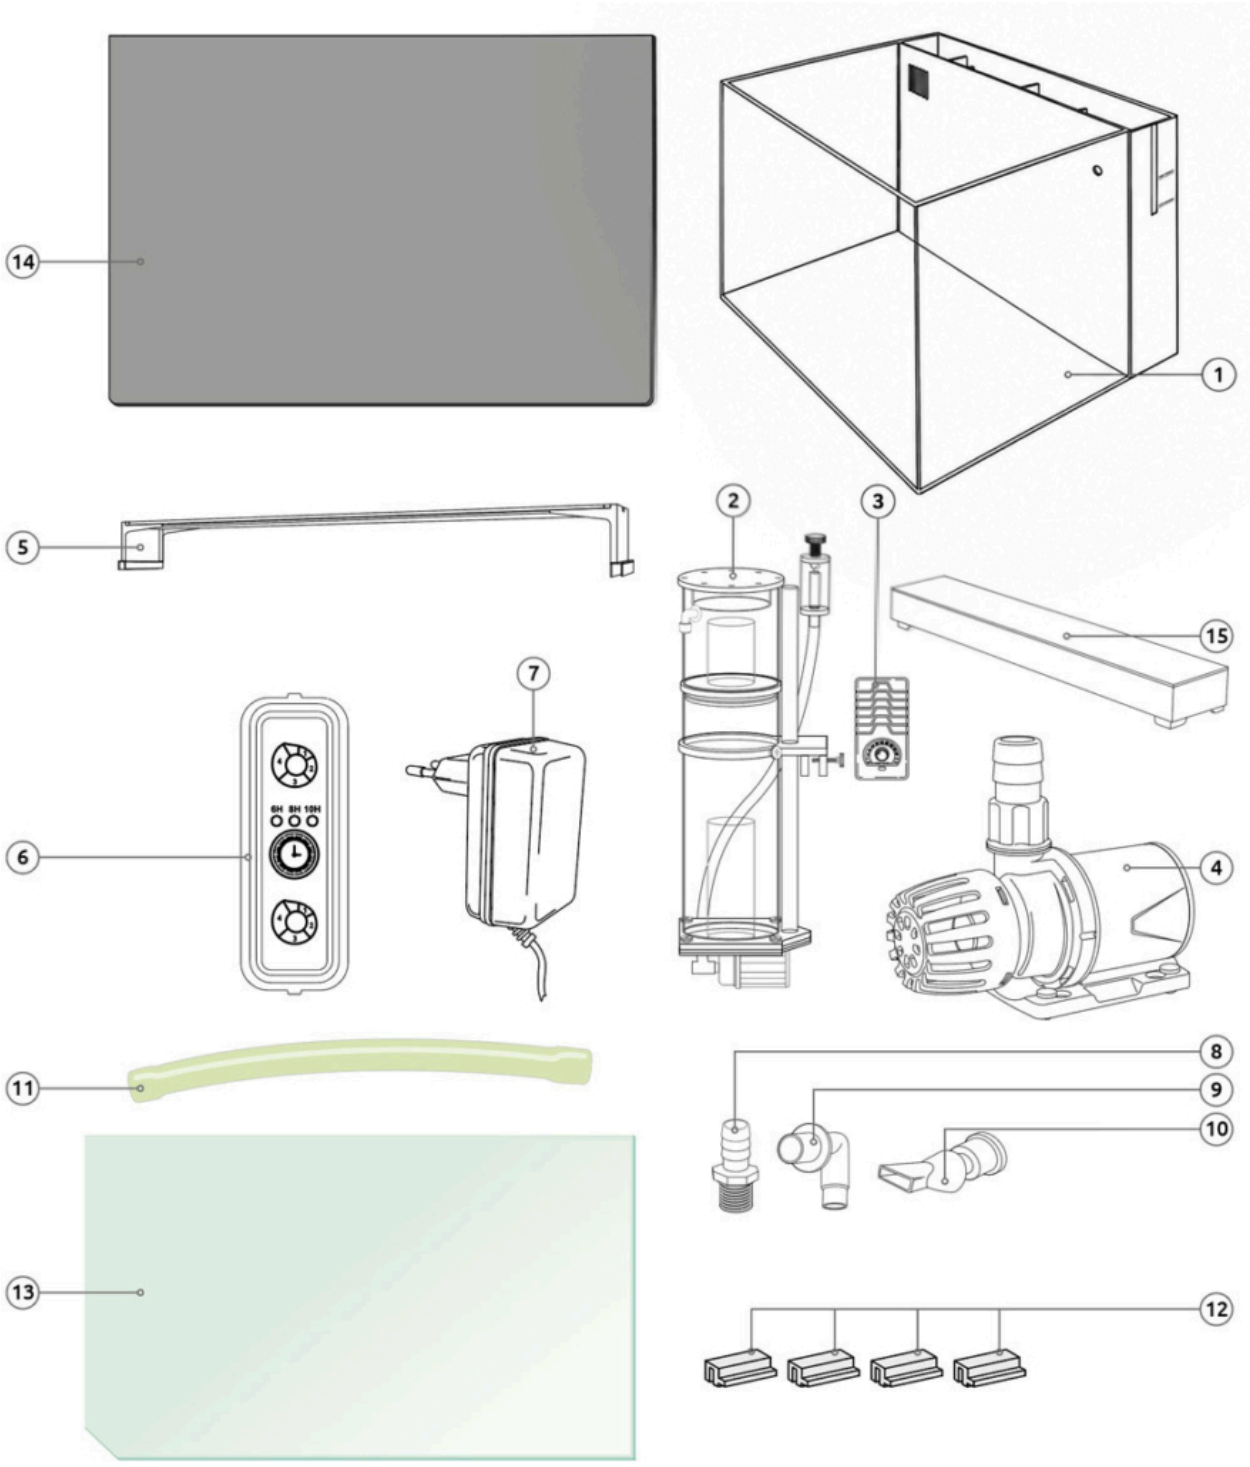

Reef Aquarium 120

User manual

EN


14
1
5
2
3
15
7
6
4
11
8
9
10
13
12

Parts

1. Aquarium tank
2. Skimmer (BM Internal Skimmer 200)
3. Pump controller (BM Internal Skimmer 200)
4. Pump (BM Eco Power 1000)
5. Lighting
6. Lighting controller
7. Lighting adapter


8. Hose connector
9. Spray connector
10. Spray nozzle
11. Pump hose
12. Cover plate supports
13. Glass cover plate
14. Bottom protection mat
15. Filter compartment cover

Installation

Place the tank (1) on the Bottom protector (13). Place aquarium on a smooth, horizontal surface with an adequate load-bearing capacity. Do not place the aquarium on electrical appliances or on furniture with surfaces which are liable to staining by water.

Please note. The total weights of the set up: aquaria completely with water and additives (depending on type of decoration) may be up to 180 kg.

Step 1

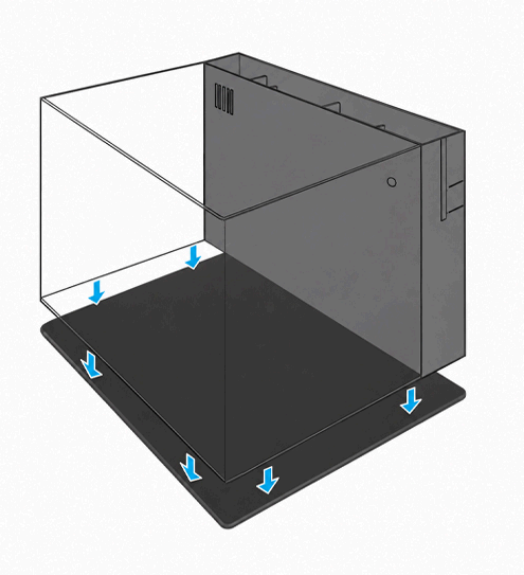


Overview »

Place the skimmer (2) in the third section of the internal sump.

Before using the BM Internal Skimmer 200, read the skimmer manual.


Step 2

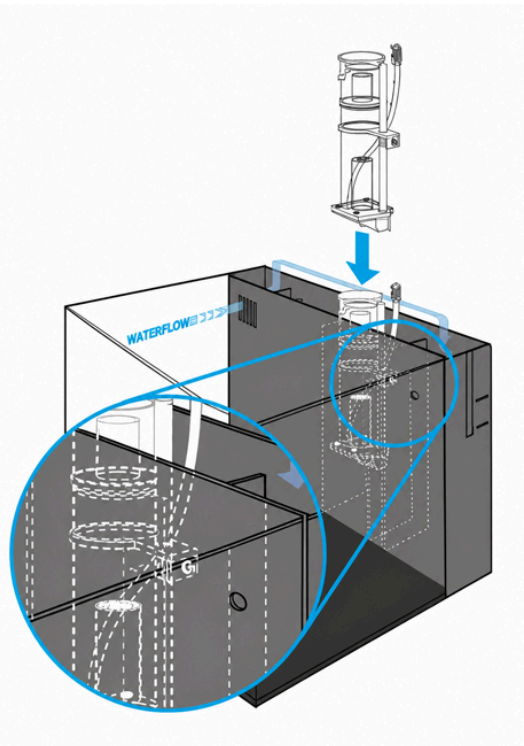

Overview »

Step 3


Place the pump (4) (BM Eco Power 1000) in the right section of the internal sump.

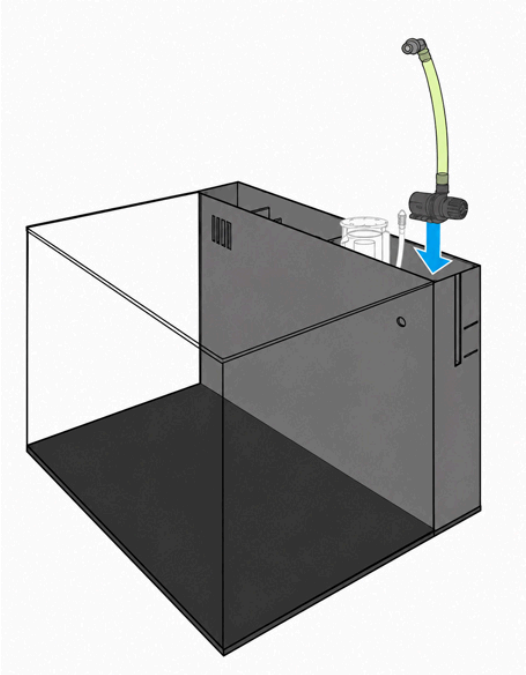

Overview »

Step 4


Insert the nozzle coupling (8) from the inside through the appropriate opening and then install the nozzle (9).

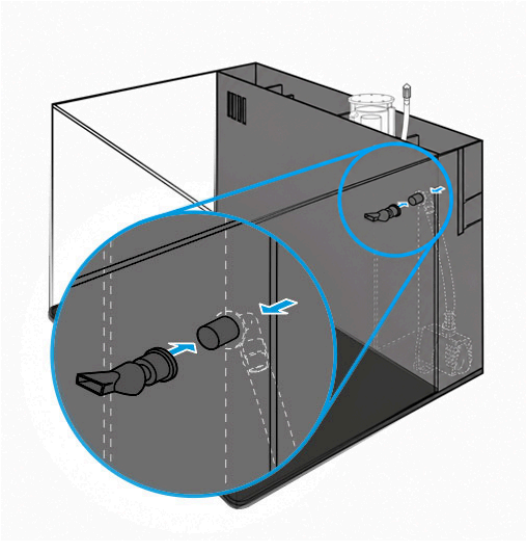

Overview »

Place the cover (14) on the sump.


Step 5

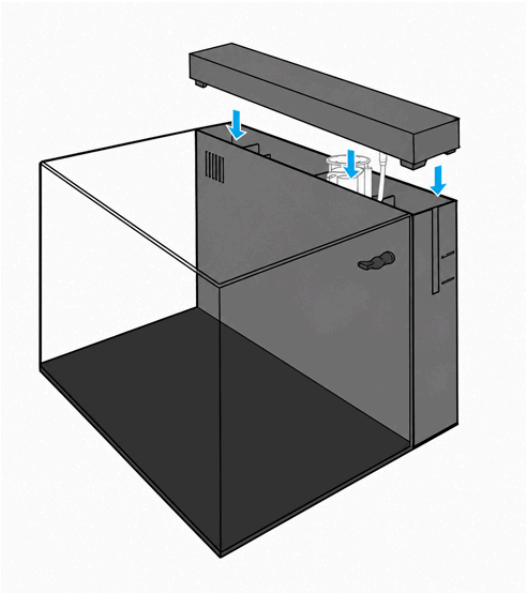

Overview »

Place the lighting (5) on the edge of the aquarium and Secure the lighting with the mounting screws


Step 6

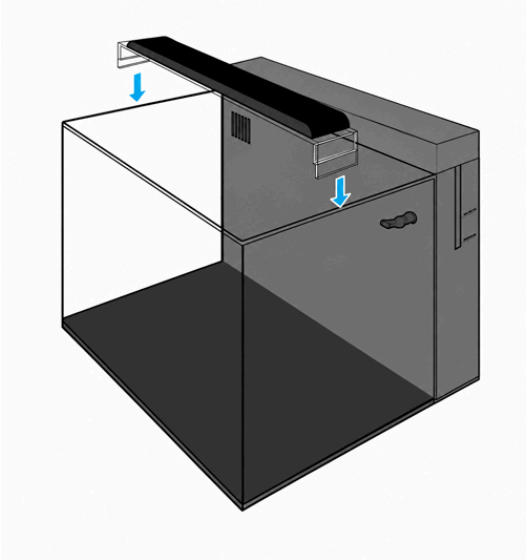

Overview »

fill the tank and filter with seawater.


Step 7

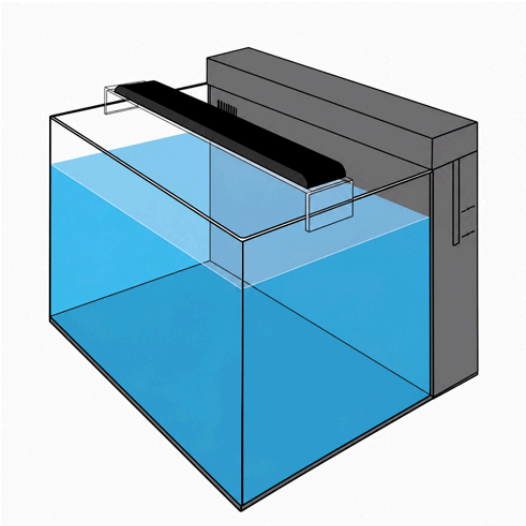

Overview »

You need to adjust the water level in the back filter when the pump is running between the minimum and maximum line.

Step 8

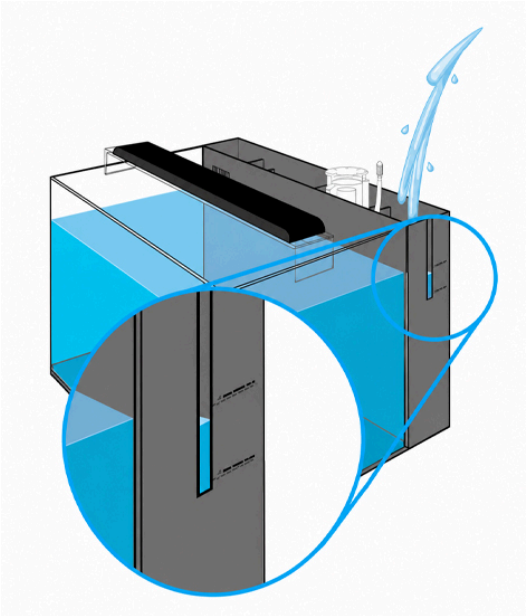


Overview »

Step 9

Place the breackets of the cover (11) on the edge of the aquarium and place the glass cover (12) on the brackets.

The Reef 120 is now ready for use.

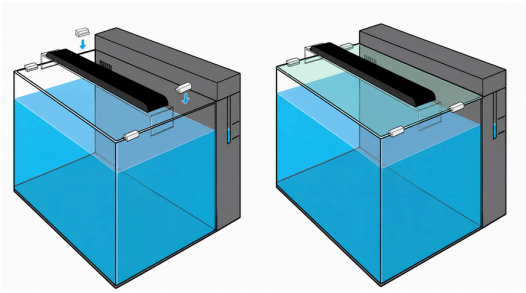

Overview »

Safety & Warranty

View the Safety & Warranty »