
BlueMarine®



WaveMaker 2000-4000-6000

User manual

EN

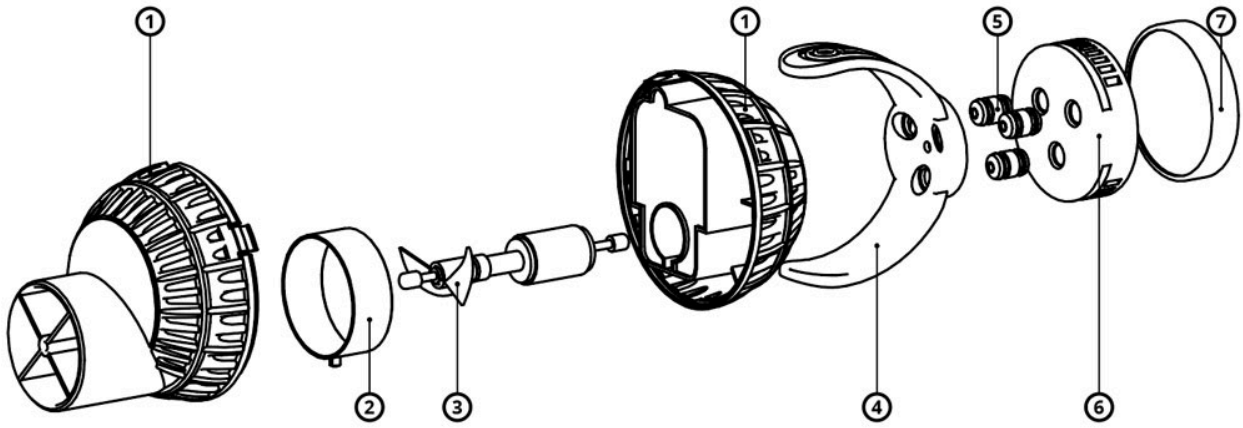

Parts

1. Housing
2. Flow control valve
3. Rotor

4. Support bracket
5. Foot mounts
6. Magnet mount 1
7. Magnet mount 2


Installation

1. Rinse the pump and parts with clean tap water before installing.
2. Choose the desired position for the magnet mount.
3. Separate the magnet mount by twisting units apart.
4. Place the magnet in the desired location in the aquarium (step 2).
5. Now start the pump by plugging the cable, ensure cable drip loop (step 3).
6. Adjust to the desired flow (step 4)

Overview »

Step 1


Place the pump in the desired position in the aquarium

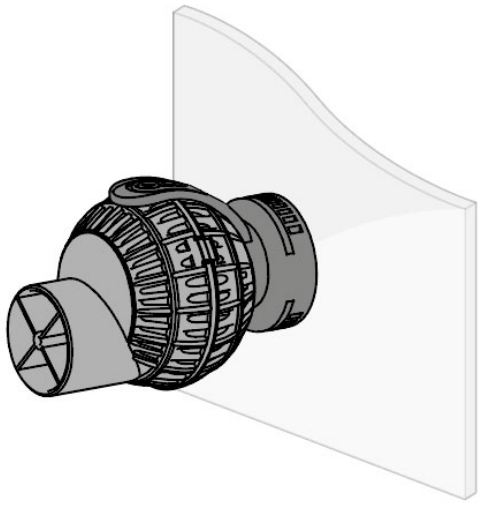

Overview »

Install magnetmount in the aquarium


Step 2

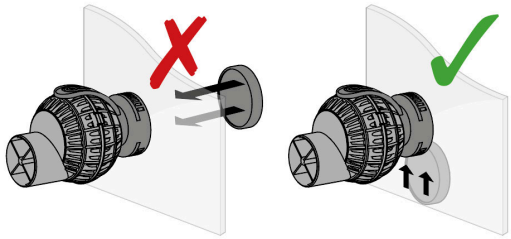

Overview »

Plug the cable in the power socket, ensure drip loop

Step 3

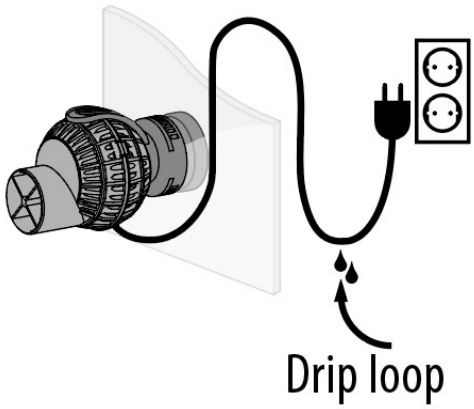

Overview »

Adjust to the desired flow with the white button. Step 4



Overview »

Cleaning and maintenance

1. Monthly cleaning is needed to ensure proper operation!
2. Disconnect pump from mains before any maintenance on the aquarium.
3. Slide the pump off the magnet mount& remove the main strainer house.
4. Open and remove rotor and stainless steel axel
5. Clean impeller and shaft with 50% vinegar and 50% water solution. Let them soak for a minimum of 15 minutes. Verify that the Prop impeller spins freely on the shaft. In some cases, it may take additional soaking to remove all calcium build-up.
6. Reassemble shaft and impeller verify that shaft caps are properly installed.
7. Reassemble pump and place back in aquarium.
8. The impellor is a wearing part that depending on usage will need changing yearly, this is considered normal maintenance and not covered under warranty. Replacement impellors are available at your dealer.

Overview »

Technical data

Model	WaveMaker 2000	WaveMaker 4000	WaveMaker 6000	WaveMaker 10000
Power	4,5 Watt	6 Watt	8 Watt	16 Watt
Flow	3000 L/h	4000 L/h	6000 L/h	10000 L/h
Size L x W x H	94 x 55 x 50 mm	66 x 61 x 114 mm	77 x 70 x 126 mm	98 x 91 x 144 mm
Aquarium Volume	50 - 150 L	66 - 200 L	200 - 400 L	400 - 600 L
Cable Length	2,5 meter	2,5 meter	2,5 meter	2,5 meter
Glass Thickness	15 mm	15 mm	15 mm	15 mm

Safety & Warranty

View the Safety & Warranty »